

Select your model below to jump to instructions for your car.

| | |
|-----------------------------|---|
| ML, GL and R Class | 2 |
| CLK, CLS, E Class 2004-2009 | 3 |
| E Class 2010 | 4 |
| S and CL Class | 5 |
| C Class 2008-2009, GLK 2010 | 6 |
| C Class 2003-2007 | 7 |

ML, GL and R Class

- Verify proper vehicle operation by starting with the key or via the push button. If the car starts and runs as normal, shut down the vehicle. Press the panic button on the key fob one time to activate the remote start. The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- A timer will appear in the gauge cluster (only works when the cluster is in radio display mode)
- The vehicle lights will flash every 5 seconds to confirm starter operation.
- If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes and arm the factory alarm.
- To enter the vehicle, unlock the door(s) with the key fob. Insert the key into the key switch and turn it to the on position. The lights will flash 3 times to confirm key take over.
- If you have KeylessGo, enter the vehicle by unlocking with the key fob and press the KeylessGo button twice to take over. The KeylessGo buttons on the outside of the vehicle are purposely disabled during remote start to prevent unauthorized entry.
- While running on remote start, any of the following will cause vehicle shut down opening the hood (7 flashes) depressing the brake pedal (6 flashes) increasing the RPM over normal idle (8 flashes)
- Three failed starts/low RPM (9 flashes) communications error (10 flashes)
- The vehicle will be limited to (5) remote starts between normal keyed operation.
- If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the KeylessGo button to synchronize.
- When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
- If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or KeylessGo button for one minute and verify proper operation.

CLK, CLS, E Class 2004-2009

- Verify proper vehicle operation by starting with the key or Keylessgo button. If the car starts and runs as normal, shut down the vehicle. Press the panic button on the key fob one time to activate the remote start. The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- The vehicle lights will flash every 5 seconds to confirm starter operation.
- If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes.
- To enter the vehicle, unlock the door(s) with the key fob or by touching the door handle on Keylessgo models.
- Keylessgo trunk opening will not operate if the vehicle is running on remote start. It will still open from the keyfob.
- Insert the key into the key switch and turn it to the on position or push the Keylessgo button twice. The lights will flash 3 times to confirm key take over.
- While running on remote start, any of the following will cause vehicle shut down: opening the hood (7 flashes), depressing the brake pedal (6 flashes), increasing the RPM over normal idle (8 flashes).
- Three failed starts/low RPM (9 flashes), communications error (10 flashes).
- The vehicle will be limited to (5) remote starts between normal keyed operation.
- If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the keylessgo button to synchronize.
- When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
- If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or keylessgo button for one minute and verify proper operation.

E Class 2010

- Verify proper vehicle operation by starting with the key.
- If the car starts and runs as normal, shut down the vehicle.
- Press the panic button on the key fob one time to activate the remote start. The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- The vehicle lights will flash every 5 seconds to confirm starter operation.
- If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes.
- To enter the vehicle, unlock the door(s) with the key fob.
- Insert the key into the key switch and turn it to the on position, or push the keylessgo button two times.
 - The lights will flash 3 times to confirm key take over.
 - While running on remote start, any of the following will cause vehicle shut down opening the hood (7 flashes) depressing the brake pedal (6 flashes) increasing the RPM over normal idle (8 flashes) three failed starts/low RPM (9 flashes) communications error (10 flashes)
 - The vehicle will be limited to (5) remote starts between normal keyed operation.
 - If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the keylessgo button to synchronize.
 - When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
 - If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or keylessgo button for one minute and verify proper operation.

S and CL Class

- Verify proper vehicle operation by starting with the key or via the push button. – If the car starts and runs as normal, shut down the vehicle. – Press the panic button on the key fob one time to activate the remote start. – The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- The vehicle lights will flash every 5 seconds to confirm starter operation.
- If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes.
- To enter the vehicle, unlock the door(s) with the key fob.
- Insert the key into the key switch and turn it to the on position.
- The lights will flash 3 times to confirm key take over.
- If you have keylessgo, enter the vehicle by unlocking with the key fob and press the keylessgo button twice to take over.
- While running on remote start, any of the following will cause vehicle shut down – opening the hood(7 flashes) – depressing the brake pedal (6 flashes) – increasing the RPM over normal idle (8 flashes)
 - three failed starts/low RPM (9 flashes) – communications error (10 flashes)
 - The vehicle will be limited to (5) remote starts between normal keyed operation. – If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the keylessgo button to synchronize.
 - When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
 - If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or keylessgo button for one minute and verify proper operation.

C Class 2008-2009, GLK 2010

- Verify proper vehicle operation by starting with the key.
- If the car starts and runs as normal, shut down the vehicle.
- Press the panic button on the key fob one time to activate the remote start. The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- The vehicle lights will flash every 5 seconds to confirm starter operation. If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes.
- To enter the vehicle, unlock the door(s) with the key fob.
- Insert the key into the key switch and turn it to the on position. The lights will flash 3 times to confirm key take over.
- While running on remote start, any of the following will cause vehicle shut down opening the hood (7 flashes) depressing the brake pedal (6 flashes) increasing the RPM over normal idle (8 flashes) three failed starts/low RPM (9 flashes) communications error (10 flashes)
- The vehicle will be limited to (5) remote starts between normal keyed operation.
- If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the keylessgo button to synchronize.
- When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
- If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or keylessgo button for one minute and verify proper operation.

C Class 2003-2007

- Verify proper vehicle operation by starting with the key.
- If the car starts and runs as normal, shut down the vehicle.
- Press the panic button on the key fob one time to activate the remote start.
- The vehicle lights will flash once to confirm receipt of activation.
- The vehicle will start and run for 15 minutes.
- The vehicle lights will flash every 5 seconds to confirm starter operation. If you do not enter the vehicle or shut down the starter, it will shut down after 15 minutes.
- To enter the vehicle, unlock the door(s) with the key fob. Insert the key into the key switch and turn it to the on position. The lights will flash 3 times to confirm key take over.
- While running on remote start, any of the following will cause vehicle shut down opening the hood (7 flashes) depressing the brake pedal (6 flashes) increasing the RPM over normal idle (8 flashes) three failed starts/low RPM (9 flashes) communications error (10 flashes)
- The vehicle will be limited to (5) remote starts between normal keyed operation.
- If the lights flash (5) times the starter is out of sync with the vehicle. This is a rare occurrence. Should it happen, you must start the vehicle with the key or the keylessgo button to synchronize.
- When the starter is not in use, it is automatically disconnected from the vehicle electronics. In addition, there is a valet override switch. Consult your installer for the location of the switch. Should you want to disconnect power to the starter and completely disable it, you can flip the valet switch to the OFF position.
- If you encounter any problems, shut the vehicle off and close all doors for 2 minutes. Then start the vehicle with the key or keylessgo button for one minute and verify proper operation.